

Installation Instructions

In floor requirements: 2 of ½" BSP male threads at 200mm centres.

1. Mount risers onto male threads in the ground at 200mm centres, turn until fully seated and with elbow outlet facing forward.
2. Assemble fibre washer into union tail and make sure it is well seated into the union nut.
3. & 4. Screw union nut and tail into elbow, tighten union tail making sure you use thread sealant and making sure that union nut can freely spin. Put fibre washer in after.
5. Tighten bibcock assembly onto union nut by hand making sure bibcock assembly is upright. Tighten with spanner.
6. Remove clamp on both sides of the brace.
7. Attach clamp approximately halfway up the risers and tighten clamp onto risers just enough to hold the brace in place.
(You can set the brace higher up if desired, or even clamp it to the horizontal stems of the bibcocks).
8. Fully tighten both screws on the brace clamp.

IMPORTANT: Maximum hot water temperature 65°C and 500 kPa Maximum operating pressure at any outlet within a building (Ref AS/NZS 3500)

WARRANTY: The Company accepts responsibility for any fault due to the Company's own workmanship or materials except for subjective variations or random unavoidable blemishes of a minor non-functional nature. This acceptance of responsibility is for 5 years from the date of installation, proof of which may be required.



CB IDEAL TAPWARE PTY LTD


1A DELORAINIE ROAD, EDWARDSTOWN S.A. 5039

PH: (08) 8276 6766 | sales@cbideal.com.au

ABN: 98 156 625035 | ACN: 156 625 035


FLOOR MOUNTED BIBCOCK SET

INSTALLATION INSTRUCTIONS

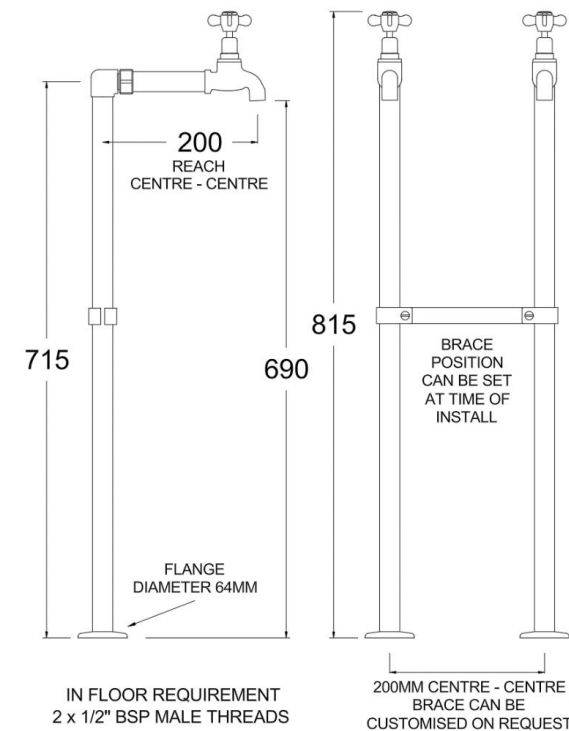


www.cbideal.com.au


1

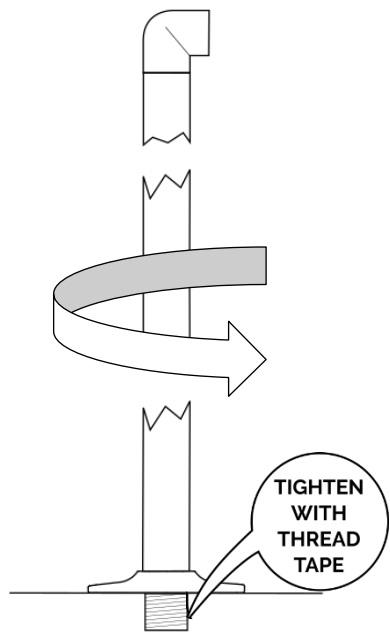


2

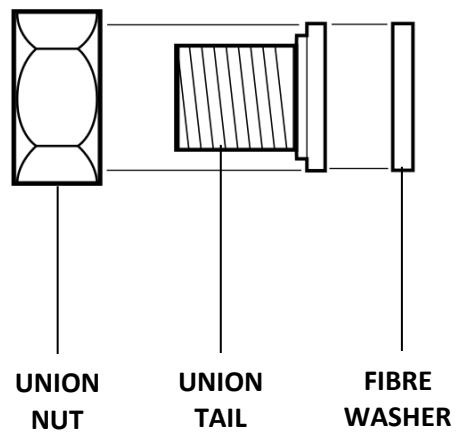


3

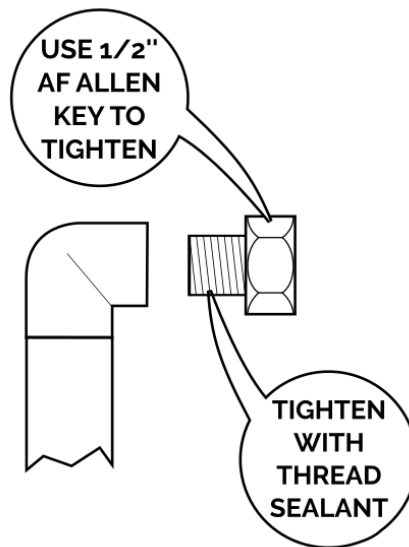


4

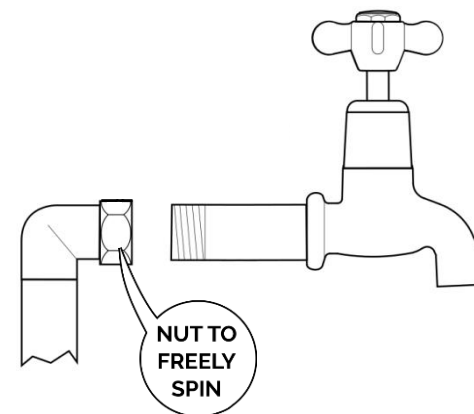


5

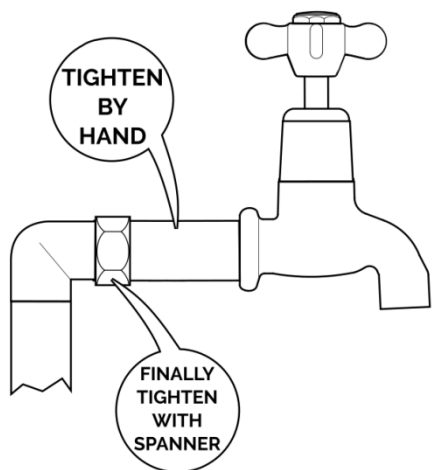

6

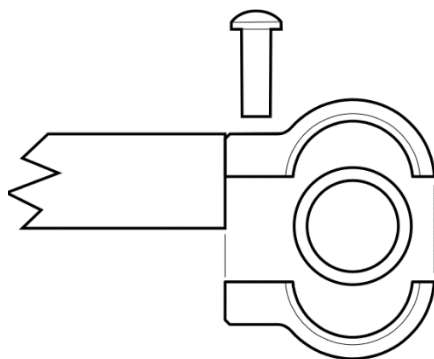

7

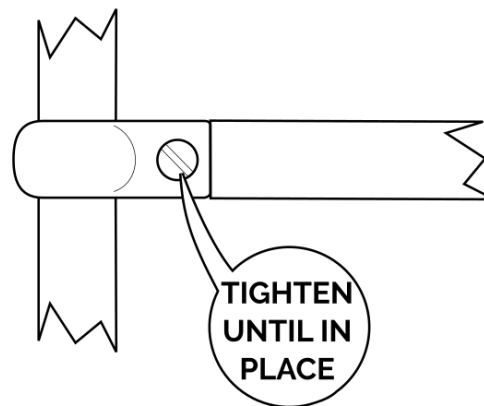

8

