DETAILED WRITTEN INSTALLATION INSTRUCTIONS

In wall requirements –2 x ½" BSP male threads at 150mm centres

- 1. Take stop taps from set as supplied, install pressed flanges and taps on to in-wall threads (use thread tape) with outlets of taps pointing upwards.
- 2. Install pillar clip on wall at a suitable point vertically above centre thread on breeching piece connection, to hold shower riser tube (Half the length of the riser tube above breeching piece or higher).
- 3. Fit nuts and olives on to breeching piece. Tighten nuts down on to outlets of taps in above with a spanner.
- 4. Assemble diverter assembly onto short riser with thread tape. Fit short shower riser (with nut and olive) to centre thread on breeching piece and tighten with a spanner. The shower riser tubing can be cut to the desired height.
- 5. Separately fit shower arm on the main riser and tighten with thread tape.
- 6. Slide nut and olive onto main riser tube and fit onto the diverter assembly, tighten down with a spanner. Tighten pillar clip clamp screw with a flat-head screwdriver. TAKE CARE as the riser tube can be easily scratched by pillar clip.
- 7. Tighten the hose and handle by hand.
- 8. Attach rose with thread tape.

IMPORTANT

Maximum hot water temperature 65°C and 500 kPa Maximum operating pressure at any outlet within a building (Ref AS/NZS 3500).

WARRANTY

The Company accepts responsibility for any fault due to the Company's own workmanship or materials except for subjective variations or random unavoidable blemishes of a minor non-functional nature. This acceptance of responsibility is for 5 years from the date of installation, proof of which may be required.

Last Review Date: 17/05/2023




CB IDEAL TAPWARE PTY LTD

1A DELORAINE ROAD, EDWARDSTOWN S.A. 5039 PH: (08) 8276 6766 | sales@cbideal.com.au ABN: 98 156 625035 | ACN: 156 625 035

ALCOVE SHOWER SET WITH HANDSHOWER AND HOSE

INSTALLATION INSTRUCTIONS

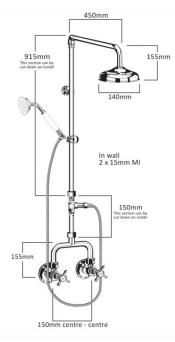

www.cbideal.com.au | sales@cbideal.com.au

